





# Barnacle Buster Static AC Unit Flush

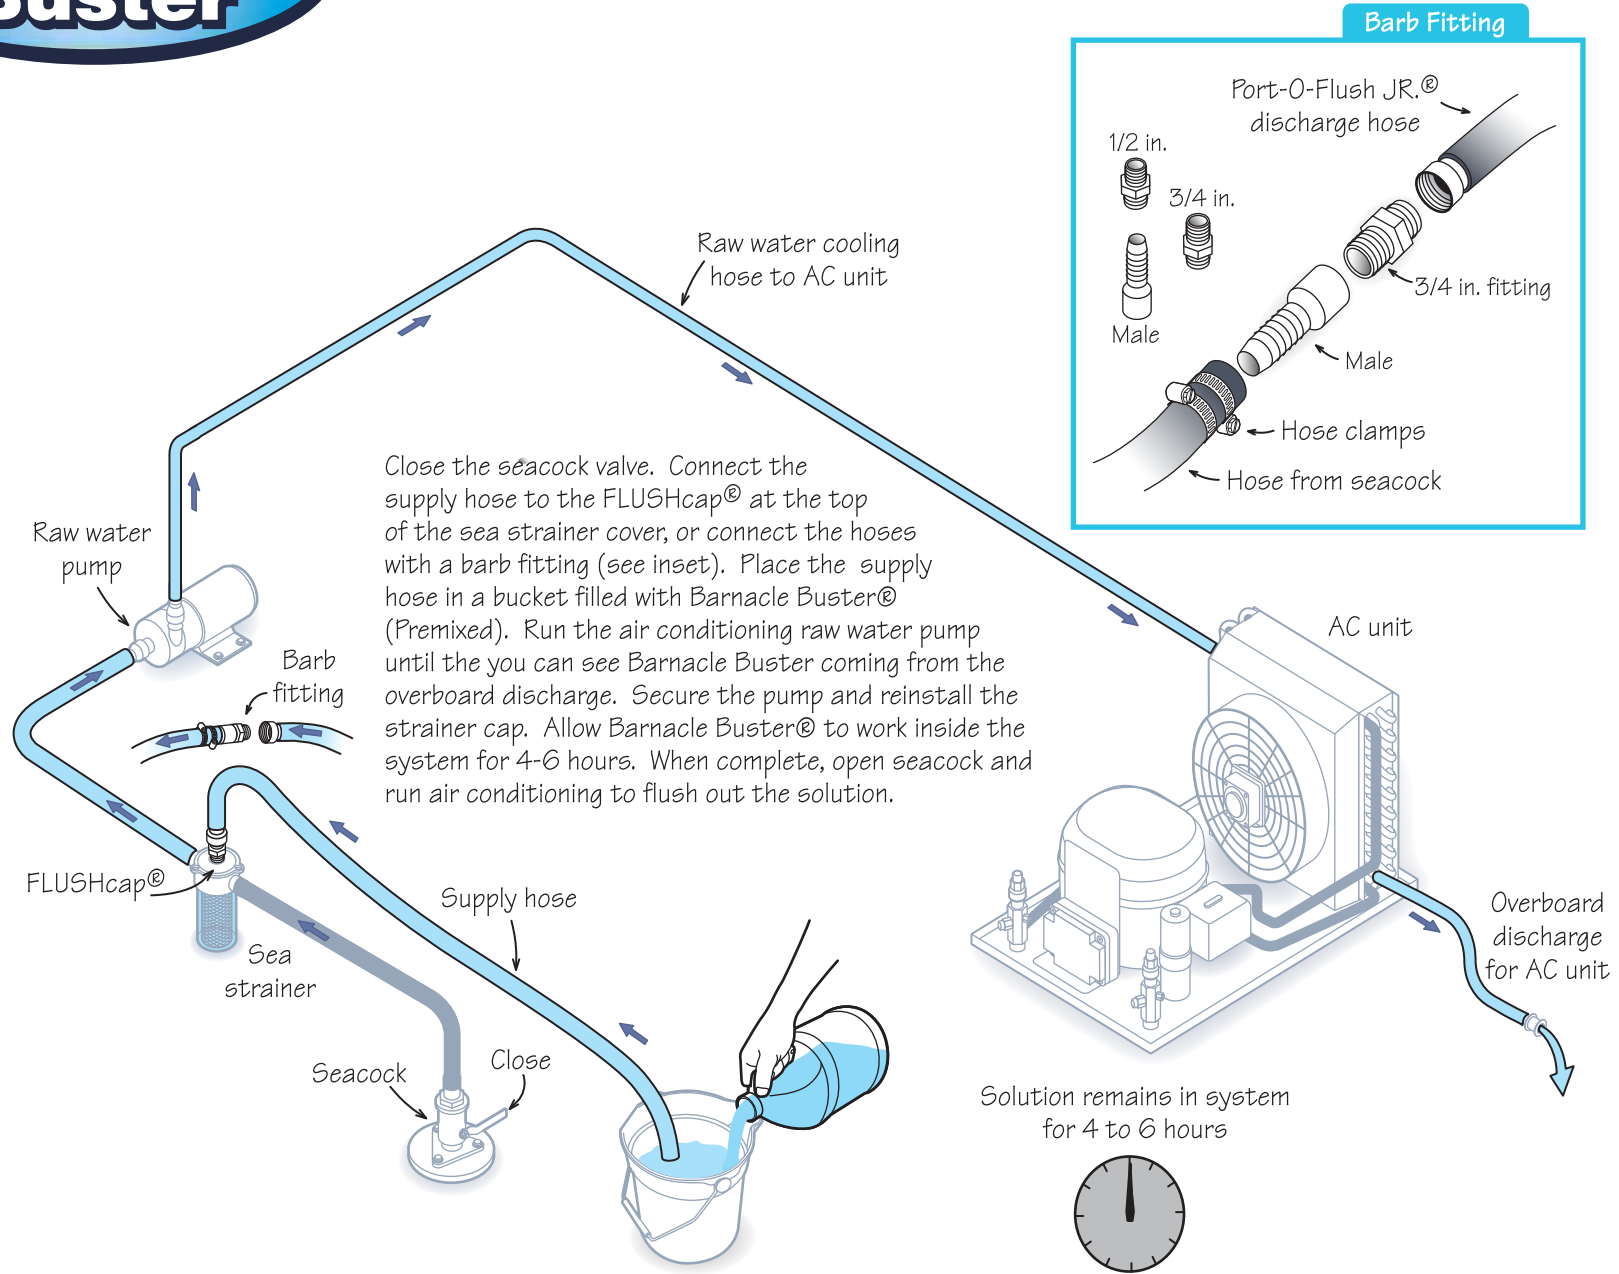

Close the seacock valve. Connect the supply hose to the FLUSHcap® at the top of the sea strainer cover, or connect the hoses with a barb fitting (see inset). Place the supply hose in a bucket filled with Barnacle Buster® (Premixed). Run the air conditioning raw water pump until the you can see Barnacle Buster coming from the overboard discharge. Secure the pump and reinstall the strainer cap. Allow Barnacle Buster® to work inside the system for 4-6 hours. When complete, open seacock and run air conditioning to flush out the solution.

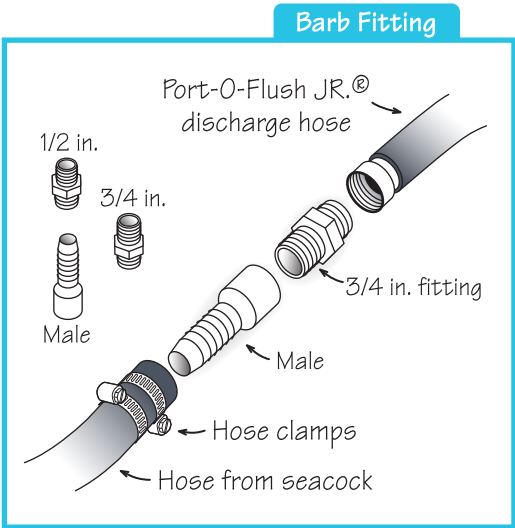

Pour the premixed solution of Barnacle Buster® Concentrate and water into a bucket.